


4

3

2

1

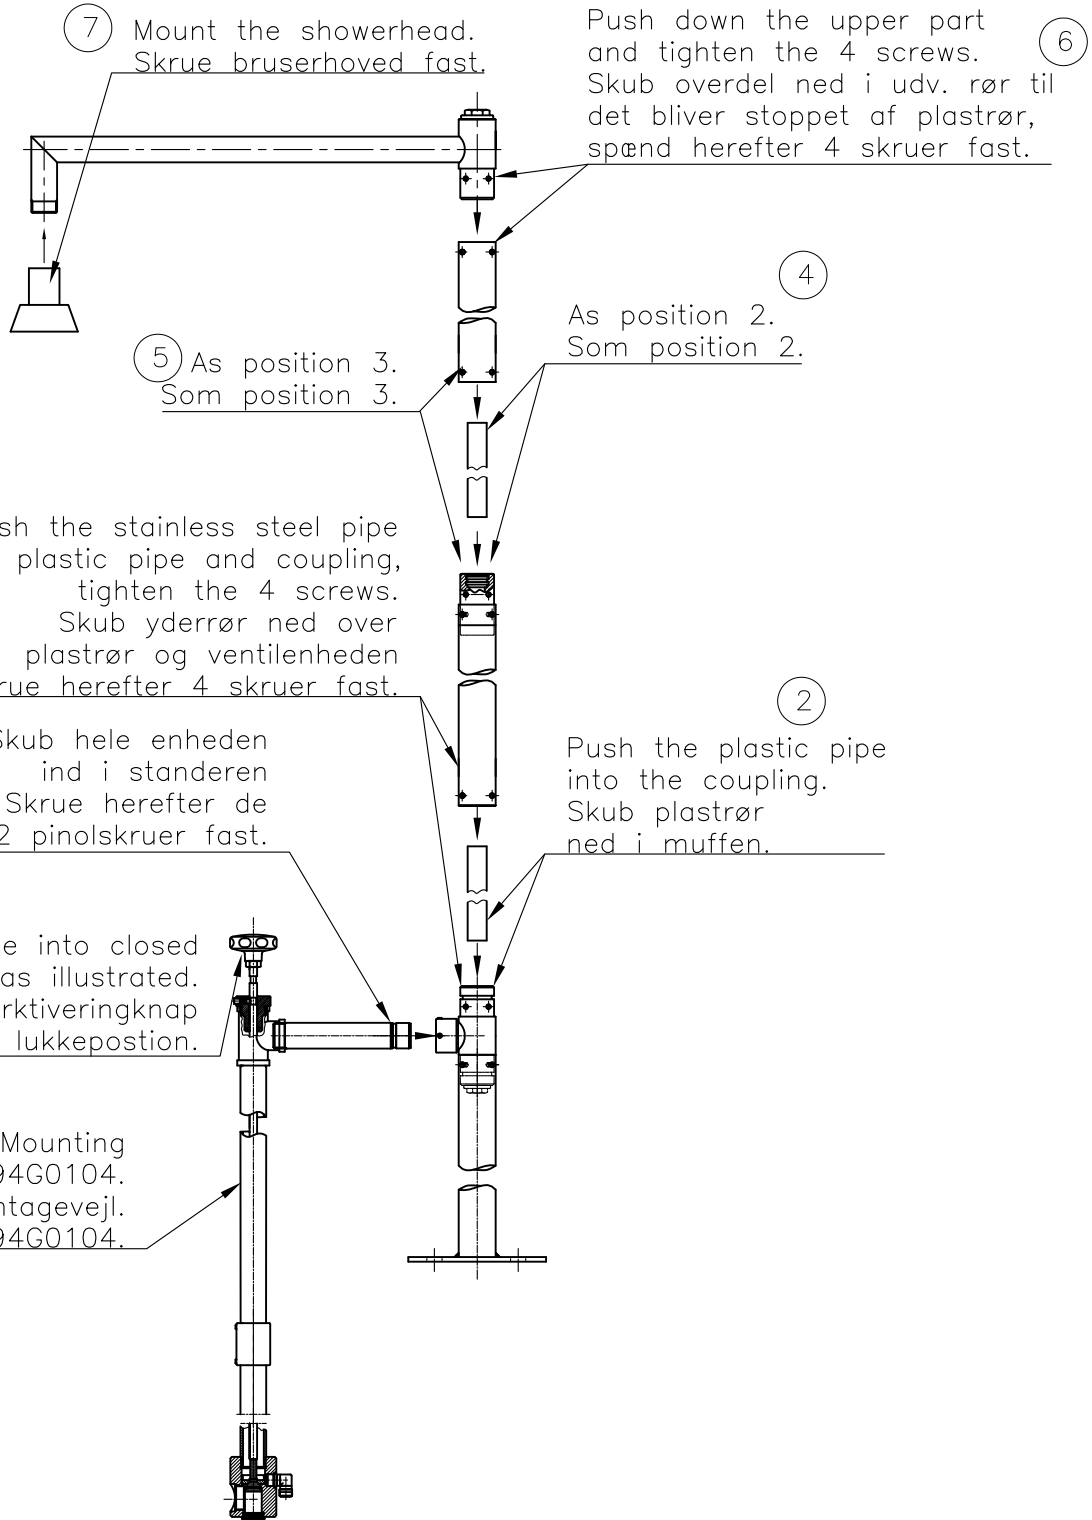

① Push the handle into closed position as illustrated.  
Skub arktiveringknop op i lukkeposition.

See the Mounting instructions 94G0104.  
Se montagevejl. 94G0104.

⑧ Skub hele enheden ind i standen  
Skrue herefter de 2 pinolskruer fast.

③ Push the stainless steel pipe over the plastic pipe and coupling, tighten the 4 screws.  
Skub yderrør ned over plastrør og ventilenheden  
Skrue herefter 4 skruer fast.

⑤ As position 3.  
Som position 3.

④ As position 2.  
Som position 2.

② Push the plastic pipe into the coupling.  
Skub plastrør ned i muffen.

⑦ Mount the showerhead.  
Skrue bruserhoved fast.

⑥ Push down the upper part and tighten the 4 screws.  
Skub overdel ned i udv. rør til det bliver stoppet af plastrør, spænd herefter 4 skruer fast.

I					Description:
H					Mounting instructions for frost-proof shower
G					Part:
F					Emergency shower
E					Drawing type:
D					Customer drawing
C					Material:
B					Specification
A					Comments
Rev.:	KEC	15.02.2005	3124	Changes:	
	Made by:	Date:	TM No.:		
Unspecified linear tolerances:				Unspecified angular tolerances:	Dimensions marked with a magnifying glass must be checked.
ISO2768-M				ISO2768-M	

# BROEN

This drawing is our property and cannot be given to a third party, copied or otherwise used without our permission.  
BROEN A/S

Drawing No.:

# 94G0105

Form: 2-100-04/Rev0

T:\26-\94G0105.dwg

4

3

2

1